0607874HC4701



PHOTOVOLTAIC INVERTER

PV-PNS04ATL-GER PV-PNS06ATL-GER





SOLARSTROM-WECHSELRICHTER MODELL PV-PNS04ATL-GER PV-PNS06ATL-GER

Bedienungsanleitung

für den Anwender



 Bitte Lesen Sie dieses Handbuch sorgfältig, damit Sie den Solarstrom-Wechselrichter (Wechselrichter) korrekt und sicher bedienen können. Achten Sie besonders auf den Abschnitt "Sicherheitshinweise", ehe Sie den Wechselrichter verwenden.

Sorgen Sie dafür, dass dieses Handbuch dem Bediener des Wechselrichters immer zur Verfügung steht.

Der Solar-Wechselrichter (PV-Inverter) PV-PNS04ATL-GER / PV-PNS06ATL-GER entspricht den Anforderungen der DIN VDE 0126-1-1. Daher der dieser Wechselrichter nur in Ländern verwendet werden, in denen diese Richtlinie gilt.

Inhaltsverzeichnis

Seite

Ei	Einführung					
1	Sicherheitshinweise $\dots \dots \dots$					
2	Anwendbare Standards					
3	Konfiguration des Solarstromsystems $\dots \dots \dots 9^{\sim}10$					
4	Wechselrichterteile und Bezeichnungen					
	4.2 Anzeige					
	4.3 Kabelverschraubungen 12					
5	Bedienung des Wechselrichters					
	5.1 Bedienung 13~14					
	5.1.1 Start (Einschalten) 13					
	5.1.2 Stopp (Abschalten) · · · · · · · · · · · · · · · · · · ·					
	5.2 Betriebsstatus abzeigen · · · · · · · · · · · · · · · · · · ·					
	5.2.1 LCD- und LED-Anzeigen \cdots 15 \sim 17					
	5.2.2 Aktionen bei eingeschalteter Fehler-LED					
	5.3 Betriebsdaten anzeigen 19~29					
	5.3.1 Anzeigeobjekt wählen \cdots 19 \sim 21					
	5.3.2 Beschreibung der Anzeigeobjekte $\dots \dots \dots 22^{\sim}26$					
	5.3.3 Einstellen von Datum- und Uhrzeit (24-Stundenanzeige) 27					
	5.3.4 Angezeigte Sprache einstellen 28					
	5.3.5 Preise für verkaufte Energie einrichten					
	5.3.6 Einrichten der Adressnummer $\dots \dots \dots \dots \dots 30 \sim 31$					
6	Wartung					
	6.1 Tägliche Wartung $\dots 32 \sim 34$					
	6.2 Tägliche Überprüfungen					
	6.3 Fehler!?					

7	Technische Daten	38~45
	7.1 Spezifikationen	38~40
	7.2 Fehlercodes · · · · · · · · · · · · · · · · · · ·	41~42
8	Glossar	43
9	Stromerzeugungsaufzeichnung	44~45

Einführung



Danke, dass Sie sich für einen Solarstrom-Wechselrichter PVPNS04ATL-GER / PV-PNS06ATL-GER entschieden haben. In diesem Handbuch wird die Bedienung des Wechselrichters PVPNS04ATL-GER / PV-PNS06ATL-GER beschrieben. Benutzen Sie dieses Handbuch als Führer durch die zahlreichen Funktionen, die Ihnen der Wechselrichter bietet.

Die Installation Solarstrom-Wechselrichters PV-PNS04ATL-GER / PV-PNS06ATL-GER wird im Installationshandbuch des SOLARSTROM-WECHSELRICHTERS PV-PNS04ATL-GER / PV-PNS06ATL-GER beschrieben.

1 Sicherheitshinweise

Die folgenden Symbole zeigen den Grad und die Art der Gefährdung, wenn die Sicherheitshinweise nicht beachtet werden.



	ACHTUNG Warnt vor schweren Verletzungen oder Schäden am Gebäude oder im Haushalt, wenn der Wechselrichter falsch bedient wird.						
	Stellen Sie nichts auf den Wechselrichter. Versperren Sie nicht die Lüftungsöffnung des Wechselrichters. Sonst können Verletzungen, Stromschlag oder Feuer die Folge sein.						
\bigcirc	Setzen Sie den Wechselrichter keiner kalten Luft oder Dampf aus. Sich ansammelndes Eis kann zu Fehlstrom oder zu Kurzschlüssen führen.						
Verboten	Betrieben Sie den Wechselrichter nicht in der Nähe von Geräten, die mit hohen Frequenzen arbeiten, wie beispielsweise Walkie-Talkies. Eine Störung kann zu einem Kurzschluss führen.						
	Wischen Sie den Wechselrichter nicht mit einem nassen Tuch ab. Ein Stromschlag kann die Folge sein.						
Wichtig	Tragen Sie beim Reinigen des Wechselrichters Handschuhe. Kanten, wie an der Lüftungsöffnung, können zu Verletzungen führen.						
Nicht berühren	Berühren Sie die Lüftungsöffnung des Wechselrichters nicht, während er arbeitet oder kurz nachdem er abgeschaltet wurde. Sie kann über 60°C warn sein. Dies kann zu Verbrennungen führen.						

Installieren Sie den Wechselrichter nicht an den folgenden Stellen: (Anderenfalls kann der Wechselrichter herunterfallen oder rein sicherer Betrieb ist nicht möglich. Außerdem kann die Garantie verfallen.)

- · Außen oder Außenbereiche (* NICHT in Bereichen, wie auf einer Seite offene Garagen, montiert, der Montageplatz muss durch Türen gesichert sein.
- · Stellen mit direkter Sonneneinstrahlung
- · Enge Stellen mit schlechter Lüftung
- · Spritzwasserzonen
- · Stellen mit sehr hoher Luftfeuchtigkeit, wie Waschräume
- · Stellen mit Dampf, Ölnebel, Rauch Staub, Salz oder korrosiven Substanzen
- · Stellen mit Öldämpfen, wie Küchen
- · Stellen mit explosiven oder brennbaren Gasen
- · Stellen, an denen Vibrationen und Stöße auftreten
- · Stellen in der Nähe von brennbaren Materialien
- · Orten mit nicht normalen Betriebsbedingungen, die oben nicht beschrieben wurden (beispielsweise Schiffe oder Motorfahrzeuge)
- · Stellen mit salzhaltiger Luft

Hinweis

Installieren Sie den Wechselrichter nicht an den folgenden Stellen: (Anderenfalls kann der Wechselrichter elektrische Störungen hervorrufen.)

- · Stellen, an denen elektrische Störungen nicht auftreten dürfen
- · Stellen in der Nähe von Fernseh- und Rundfunkgeräten oder Kabeln

2 Anwendbare Standards

Ihr Solarstrom-Wechselrichter entspricht den Regel und Vorschriften nach LVD, EMC und CE. Außerdem entspricht das Gerät den Vorschriften EN und DIN VDE 0126-1-1. Der Wechselrichter entspricht den Regeln zur elektromagnetischen Verträglichkeit (EMV) und den Niederspannungsrichtlinien (LVD) wie in der CE-Konformitätserklärung definiert.

Informationen zur Entsorgung



Ihr MITSUBISHI ELECTRIC -Produkt wurde unter Einsatz von qualitativ hochwertigen Materialien und Komponenten konstruiert und gefertigt, die für Recycling geeignet sind.

Dieses Symbol bedeutet, dass elektrische und elektronische Geräte am Ende ihrer Nutzungsdauer von Hausmüll getrennt zu entsorgen sind.

Bitte entsorgen Sie dieses Gerät bei Ihrer kommunalen Sammelstelle oder im örtlichen Recycling-Zentrum.

In der Europäischen Union gibt es unterschiedliche Sammelsysteme für gebrauchte Elektrik- und Elektronikgeräte.

Bitte helfen Si e uns, die Umwelt zu erhalten, in der wir leben!

3 Konfiguration des Solarstromsystems

Übersicht über das Basissystem



Der Solarstrom-Wechselrichter wandelt Gleichstrom, der von Solarzellenmodulen (SZ-Module) erzeugt wird, in Wechselstrom um, und speist diesen in das Stromnetz ein.



① Solarzellenmodul

Dieses Modul wandelt Sonnenlicht in Gleichstrom um.

Mehrere Solarzellen ergeben eine Solarzellenmodul.

Mehrere Solarzellenmodule werden Solarzellengruppe genannt.



2 DC-Trennschalter

Er befindet sich zwischen den Solarzellenmodulen und dem Wechselrichter und schaltet oder unterbricht den Stromkreis zur Modulseite.



③ Solarstrom-Wechselrichter

Dieses Gerät wandelt den durch die Solarzellenmodule erzeugten Gleichstrom in Wechselstrom um.

④ AC-Trennschalter

Er befindet sich zwischen dem Netz und dem Wechselrichter und schaltet oder unterbricht den Stromkreis zur Netzseite.

4 Wechselrichterteile und Bezeichnungen (PV-PNS04ATL-GER / PV-PNS06ATL-GER)

4.1 Erscheinungsbild



4.2 Anzeige

Zur Anzeige gehören eine LCD, drei LEDs und vier Schalter. Mit ihrer Hilfe können Sie verschiedene Betriebsdaten anzeigen und, wenn erforderlich, den Solarstrom-Wechselrichter bedienen.



4.3 Kabelverschraubungen

Der Wechselrichter ist mit folgenden Kabelverschraubungen ausgestattet.



- ① DC(-)-Kabelverschraubung
- 2 DC(+)-Kabelverschraubung
- ③ AC-Kabelverschraubung
- (4) Kabelverschraubung Kommunikationsleitung (optional)

5 Bedienung des Wechselrichters (PV-PNS04ATL-GER / PV-PNS06ATL-GER)

Im Folgenden wird die Bedienung des Wechselrichters beschrieben.

5.1 Bedienung

Im Nachfolgenden wird das Ein- und Ausschalten des Solarstrom-Wechselrichters beschrieben.

5.1.1 Start (Einschalten)

	Anzeige	Vorgehensweise
1		Drücken und halten Sie, wenn der Wechselrichter nicht aktiviert ist, die POWER-Taste für mindestens 2 Sekunden. • Der Wechselrichter startet und auf der LCD öffnet sich eine "Tür".
2	START BITTE WARTEN 12345kWh (Das System bereitet sich auf den Start vor)	Die LCD zeigt für 3 Sekunden "START" und schaltet dann in den STATUS-Mode um.
3	BETRIEB 12345 kWh (Bei angeschlossenem Netz)	Danach zeigt die LCD in diesem Mode verfügbare Informationen wie Meldungen, Status der Stromerzeugung, erzeugte Energie usw Details finden Sie unter "5.2 Betriebsstatus anzeigen".

Nach dem Einschalten arbeitet der Wechselrichter entsprechend dem einfallenden Sonnenlicht.

5.1.2 Stopp (Abschalten)

Gehen Sie folgendermaßen vor, um den Wechselrichter zu stoppen:

	Anzeige	Vorgehensweise		
		Drücken und halten Sie, wenn der		
		Wechselrichter arbeitet, die POWER-		
	12345kWh	Taste für mindestens 2 Sekunden.		
1		· Hierdurch wird der Wechselrichter		
	STOPP	gestoppte und auf der Anzeige		
		erscheint für 3 Sekunden "STOPP".		
	•	Die "Tür" auf der LCD beginnt sich zu		
2		schließen.		
		Der Wechselrichter schaltet ab.		
3		"" auf der LCD zeigt Ihnen, dass der Solarstrom-Wechselrichter deak-		
		tiviert ist.		

5.2 Betriebsstatus abzeigen

Auf der LCD und den LEDs zeigt der Wechselrichter den Betriebsstatus, der den jeweiligen Bedingungen entspricht. LCD und LEDs sind während der Nacht oder wenn zu wenig Sonnenlicht vorhanden ist ausgeschaltet. In diesem Fall schaltet sich die Stromversorgung des Wechselrichters ab.

5.2.1 LCD- und LED-Anzeigen

Nachfolgend finden Sie eine Übersicht über die jeweiligen Betriebsarten, die auf der LCD und den LEDs angezeigt werden.

- * LED: $\stackrel{i}{=}$ steht für EIN, $\stackrel{i}{=}$ steht für blinken und \bigcirc steht für AUS.
- ※ Ein numerischer Wert unten rechts auf der LCD zeigt die erzeugte Energie in kWh.

STOPP (Abschalten)

	LED			Beschreibung
	STROM	NETZ	FEHLER	Deschielbung
(Anzeige aus)	0	0	0	LCD und LEDs sind aus, wenn (1) wenig Sonnenlicht vorhan- den ist und nachts, oder wenn (2) der DC-Trennschalter aus ist. In diesem Fall schaltet sich die Stromversorgung des Wechselrichters ab.
	0	0	0	Der Wechselrichter schaltet ab. Drücken der POWER-Taste startet den Wechselrichter wieder.

START <Warten> (Einschalten)

	LED			Bosobroibung
	STROM	NETZ	FEHLER	Deschielbung
BITTE WARTEN 12345kWh		0	0	Der Wechselrichter bereitet sich auf die Energieerzeugung vor. Danach startet der Wechselrichter.
EINGANG NIEDRIG			0	Die Einstrahlung hat sich vorübergehend reduziert. Der Wechselrichter schaltet auf Standby, bis die Einstrahlung wieder ein bestimmtes Niveau hat.
		0	0	Bei einer geringen Einstrahlung schaltet der Wechselrichter in einen Status, in dem er nicht mit dem Netz verbunden ist.
NETZAUSFALL 12345kWh		0	0	Ein Stromausfall wurde erkannt oder der AC-Trennschalter steht auf aus.
BEREITSCHAFT 12345kWh Blinkt		0	0	Die Netzschutzfunktion ist aktiv. Der Wechselrichter schaltet auf Standby, bis sich die Stromversorgung des Netzes wieder anliegt.
MONITOR 20sec 12345kWh		0	0	Die Netzschutzfunktion ist aktiv. Der numerische Wert oben rechts auf der LCD zeigt die Zeit in Sekunden, bis der Wechselrichter wieder mit der Energieerzeugung beginnt.



	LED			Beschreibung
	STROM	NETZ	FEHLER	Deschielbung
BETRIEB			0	Energie wird erzeugt. Der Balken in der unteren linken Ecke der LCD zeigt die momentan erzeugte Energie.

FEHLER

	LED			Beschreibung
LOD	STROM	NETZ	FEHLER	Deschielbung
(Typisch) STOERUNG E-24 12345kWh		0		Es wurde ein Fehler im öffentlichen Netz oder im Solarstromsystem erkannt und die integrierte Sicherheitseinrichtung wurde aktiviert. Der Wert [E-00] oben rechts ist ein Fehlercode. Details zu den Fehlercodes finden Sie auf Seite 41 unter "Fehlercodes".

Ist die Fehler-LED an, folgen Sie den Anweisungen auf Seite 18 unter "Aktionen bei eingeschalteter Fehler-LED".

5.2.2 Aktionen bei eingeschalteter Fehler-LED

Anzeige Vorgehensweise 1. Drücken und halten Sie danach die POWER-Taste für min-destens 2 Sekunden, um den Wechselrichter auszuschalten. 2. Vergewissern Sie sich, dass "----" POWER MODE SELECT ENTER ERRICH abgezeigt wird und drücken und hal-0 ten Sie danach die POWER-Taste für mindestens 2 Sekunden, um den Wechselrichter neu zu starten.

Leuchtet die FEHLER-LED, gehen Sie wie folgt vor.

Kann hierdurch der Fehler nicht beseitigt werden (die ERROR-LED schaltet wieder ein), gehen Sie wie folgt vor.

Anzeige	Vorgehensweise
	 Drücken und halten Sie danach die POWER-Taste für mindestens 2 Sekunden, um den Wechselrichter auszuschalten. Schalten Sie den DC- Trennschalter aus. Schalten Sie den AC- Trennschalter aus. Wenden Sie sich an Ihren Händler.

5.3 Betriebsdaten anzeigen

5.3.1 Anzeigeobjekt wählen

Zusätzlich zu dem in 5.2 beschriebenen Betriebsstatus können Sie verschiedene Betriebsdaten über die LCD überwachen.

- Aktuelle Betriebsdaten: Ausgangsleistung, Eingangsspannung, Netzspannung, Ausgangsstrom, (heutige) maximale Ausgangsleistung, Datum und Zeit
- (2) Kumulierte Daten: Erzeugte Energie, Menge, CO₂-Reduzierung Betriebsstunden
- (3) Tägliche Betriebsdaten: Heute erzeugte Energie, Menge, CO2-Reduzierung Betriebsstunden, gestern erzeugte Energie
- (4) Monatliche Betriebsdaten: Diesen Monat erzeugte Energie, Menge, CO2-Reduzierung Betriebsstunden, letzten Monat erzeugte Energie
- (5) Jährliche Betriebsdaten: Dieses Jahr erzeugte Energie, Menge, CO2-Reduzierung Betriebsstunden, letztes Jahr erzeugte Energie

Außerdem kann der Bediener bestimmte Punkte, wie beispielsweise Datum und Zeit, aufrufen und einstellen.

Zwischen den einzelnen Punkten kann mit den Schalter MODE und SELECT gewechselt werden.

Drücken Sie innerhalb von 30 Sekunden keine weitere Taste, schaltet die LCD auf die STATUS-Anzeige zurück.

In der folgenden Tabelle finden Sie die einzelnen Modi und die zugehörigen Anzeigen.



Sie können mit Hilfe des MODE-Schalters einen Modus auswählen.

Sie können mit Hilfe des SELECT-Schalters einen in dem gewählten Modus angezeigten Punkt auswählen.





5.3.2 Beschreibung der Anzeigeobjekte

Betriebsdaten, die zu einem bestimmten Punkt angezeigt werden können, werden nachfolgend beschrieben.

• z. Zt. (Aktueller Anzeigemodus)

z.Zt

- 1. Drücken Sie mehrfach MODE, bis oben links auf der LCD "z. Zt." erscheint.
 - 2. Drücken Sie SELECT, um den anzuzeigenden Punkt aufzurufen. Die einzelnen Punkte erscheinen in folgender Reihenfolge.

Anzeigeobjekt	LCD	Beschreibung
Ausgangsleistung	z.Zt. 2.9kW AUSGANGSLEISTUNG	(Momentaner Wert für) Ausgangsleistung wird oben rechts angezeigt. (2 Stellen Integer, 1 Stelle Dezimal, Einheit: kW)
Eingangsspannung	z.Zt. 452.2Vdc EINGANGSSPANNUNG	(Momentaner Wert für) Eingangsspannung des Solarzellenmoduls wird oben rechts angezeigt. (3 Stellen Integer, 1 Stelle Dezimal, Einheit: Vdc)
Netzspannung Ausgangsleistung	z.Zt. 230.2Vac NETZSPANNUNG	(Momentaner Wert für) Netzspannung wird oben rechts angezeigt. (3 Stellen Integer, 1 Stelle Dezimal, Einheit: Vac)
Ausgangsstrom	z.Zt. 12.8Aac AUSGANGSSTROM	(Momentaner Wert für) Ausgangs-Strom des Solarstrom-Wechselrichters wird oben rechts angezeigt. (3 Stellen Integer, 1 Stelle Dezimal, Einheit:Aac)
Maximale Ausgangsleistung:	z.Zt. 3.0kW TAGESMAXTMUM	(Momentaner Wert für) Maximale heutige Ausgangsleistung wird oben rechts angezeigt. (2 Stellen Integer, 1 Stelle Dezimal, Einheit: kW)
Datum und Zeit (24-Stundenanzeige)	z.Zt. 15:21:34 25 AUG 2006	(Momentaner Wert für) Stunde, Minute und Sekunde wird oben rechts angezeigt. (Heutiger) Tag, Monat und Jahr werden in der unteren Zeile angezeigt.

SUMME (Anzeigemodus kumulierte Werte)

SUMME

- 1. Drücken Sie mehrfach MODE, bis oben links auf der LCD "SUMME" erscheint.
- Drücken Sie SELECT, um den anzuzeigenden Punkt aufzurufen. Die einzelnen Punkte erscheinen in folgender Reihenfolge.

Anzeigeobjekt LCD Beschreibung Die kumulierte erzeugte Energie wird Gesamte SUMME 12345kWh oben rechts angezeigt. (5 Stellen ERZEUGTE ENERGIE erzeuate Eneraie Integer, Einheit: kWh) Die an den Stromnetzbetreiber verkaufte Gesamtenergie wird oben SUMME 5360EUR Gesamtmenge GESAMT rechts angezeigt. (5 Stellen Integer, Einheit: EUR) Die gesamte durch den Wechselrichter CO₂-Reduzieruna SUMME 2185kaC erzielte des CO₂-Minderung CO2 REDUKTION Solarstromsystems wird oben rechts angezeigt, (5 Stellen Integer, Einheit; kgC) Die Gesamtbetriebsstunden werden Gesamte SUMME 14002hr oben rechts angezeigt. (5 Stellen BETRIEBSSTUNDEN Betriebsstunden: Integer, Einheit: hr)

•TAG (Anzeigemodus kumulierte Werte)

TAG

- 1. Drücken Sie mehrfach MODE, bis oben links auf der LCD "TAG" erscheint.
- 2. Drücken Sie SELECT, um den anzuzeigenden Punkt aufzurufen. Die einzelnen Punkte erscheinen in folgender Reihenfolge.

Anzeigeobjekt	LCD	Beschreibung
Heute erzeugte Energie	TAG 26 kWh ERZEUGTE ENERG I E	Die heute erzeugte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kWh)
Heutige Menge	TAG 11EUR SUMME	Die heute verkaufte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: EUR)
Heutige CO2- Minderung	TAG 5kgC CO2 REDUKTION	Die heutige durch den Wechselrichter erzielte CO ₂ -Reduzierung des Solarstromsystems wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kgC)
Heutige Betriebsstunden	TAG 10hr BETRIEBSSTUNDEN	Die heutigen Betriebsstunden wer- den oben rechts angezeigt. (5 Stellen Integer, Einheit: hr)
Gestern erzeugte Energie	TAG 23kWh GESTRIGE ENERGIE	Die gestern erzeugte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kWh)

Deutsch

MONAT (Anzeigemodus kumulierte Werte)

MONAT

- 1. Drücken Sie mehrfach MODE, bis oben links auf der LCD "MONAT" erscheint.
- 2. Drücken Sie SELECT, um den anzuzeigenden Punkt aufzurufen. Die einzelnen Punkte erscheinen in folgender Reihenfolge.

Anzeigeobjekt	LCD	Beschreibung
Diesen Monat erzeugte Energie	MONAT 297 kWh ERZEUGTE ENERGIE	Die diesen Monat erzeugte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kWh)
Diesen Monat erzeugte Menge	MONAT 129EUR SUMME	Die diesen Monat verkaufte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: EUR)
Diesen Monat erreichte CO2- Minderung	MONAT 53kgC CO2 REDUKTION	Die in diesem Monat durch den Wechselrichter erreichte CO ₂ -Reduzierung des Solarstromsystems wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kgC)
Betriebsstunden in diesem Monat	MONAT 300h r BETR I EBSSTUNDEN	Die in diesem Monat erreichten Betriebsstunden werden oben rechts angezeigt. (5 Stellen Integer, Einheit: hr)
Letzten Monat erzeugte Energie	MONAT 285kWh OKT 2006 ENERGIE	Die im letzen Monat erzeugte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kWh)

• JAHR (Anzeigemodus kumulierte Jahreswerte)

JAHR

- 1. Drücken Sie mehrfach MODE, bis oben links auf der LCD "JAHR" erscheint.
- 2. Drücken Sie SELECT, um den anzuzeigenden Punkt aufzurufen. Die einzelnen Punkte erscheinen in folgender Reihenfolge.

Anzeigeobjekt	LCD	Beschreibung
Dieses Jahr erzeugte Energie	JAHR 3218kWh ERZEUGTE ENERGIE	Die dieses Jahr erzeugte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kWh)
Dieses Jahr erzeugte Menge	JAHR 1397EUR SUMME	Die dieses Jahr verkaufte Energie wird oben rechts angezeigt. (5 Stellen Integer, Einheit: EUR)
Dieses Jahr erre- ichte CO2- Minderung	JAHR 570kgC CO2 REDUKTION	Die in diesem Jahr durch den Wechselrichter erreichte CO ₂ -Reduzierung des Solarstromsystems wird oben rechts angezeigt. (5 Stellen Integer, Einheit: kgC)
Betriebsstunden in diesem Jahr	JAHR 3650h r BETR I EBSSTUNDEN	Die in diesem Jahr erreichten Betriebsstunden werden oben rechts angezeigt. (5 Stellen Integer, Einheit: hr)
Letztes Jahr erzeugte Energie	JAHR 3302kWh 2005 ENERGIE	Die im letzen Jahr erzeugte Energie wird oben rechts angezeigt. Das Jahr wird unten links angezeigt. (5 Stellen Integer, Einheit: kWh)

5.3.3 Einstellen von Datum- und Uhrzeit (24-Stundenanzeige)

	Anzeige	Vorgehensweise
1	Image: Setzen data with the set of	 Drücken Sie mehrfach MODE, um zu "SETZEN" zu wechseln. Oben links auf der LCD wird "SETZEN" angezeigt. In der unteren Reihe erscheint "DATUM/ZEIT" und Sie befinden sich im Zeiteinstellungsmodus.
2	MITSUBISHI ELECTRIC Z.Zt. 15:21:34 25 AUG 20 POWER MODE POWER MODE Blinkt	 Drücken Sie ENTER. Sie können den Wechselrichter jetzt einstellen. Die derzeitige Einstellung von "Stunde, Minute, Sekunde" sowie "Tag, Monat und Jahr" wird angezeigt. Die Dezimalstelle beginnt zu blinken.
3	Image: Second system	 Jedes Mal, wenn Sie SELECT drücken, schaltet der Wert um. → 1 → 2 → …9 → 0 → Wählen Sie die Zahl, die Sie für den Wechselrichter einstellen wollen. Drücken Sie MODE. Jetzt blinkt die erste Ziffer (und Sie können einen Wert eingeben). Drücken Sie die MODE-Taste, um die Stelle zu wählen, die Sie einstellen wollen. Hierbei begin- nt die jeweilige Stelle zu blinken. Drücken Sie SELECT, um das entsprechende Datum und die Zeit auszuwählen.
4	MITSUBISHI ELECTRIC SETZEN DATUM / ZE I T POWER MODE GELECT ENTER O O O O O O O O O O O O O O O O O O O	Drücken Sie ENTER, um Ihre Vorgaben für Datum und Zeit zu übernehmen. (Der Wechselrichter springt jetzt auf den Schritt 1 zurück.)

5.3.4 Angezeigte Sprache einstellen

	Anzeige	Vorgehensweise
1		1. Drücken Sie mehrfach MODE, um zu "SETZEN" zu wechseln.
	SPRACHAUSWAHL	2. Drücken Sie mehrfach SELECT, um zu "SPRACHAUSWAHL" zu wechseln.
		 In der untere Zeile der LCD wird SPRACHAUSWAHL" angezeigt.
		Drücken Sie ENTER.
2	SPRACHAUSWAHL ENGLISH POWER MCDE SELECT ENTER O O O O O ENTER O O O O O O O O O O O O O O O O O O O	 Sie können den Wechselrichter jetzt einstellen. Die zur Zeit eingestellte Sprache wird in der unteren Zeile der LCD angezeigt.
	 Blinkt	
		Jedes Mal, wenn Sie SELECT
	DEUTSCH	
3		ENGLISH→DEUTSCH→ITALIANU .
		Drücken Sie, wenn die von Ihnen
		gewünschte Sprache auf der LCD
4		erscheint, ENTER. Hierdurch wird die
		übernommen.
		(Der Wechselrichter springt jetzt auf den Schritt 1 zurück.)

5.3.5 Preise für verkaufte Energie einrichten

	Anzeige	Vorgehensweise
1	MITSUBISHI ELECTRIC SETZEN PRE I S OVER MODE SELECT ENTER OVER CONSCIENCE SELECT ENTER OVER CONSCIENCE	 Drücken Sie mehrfach MODE, um zu "SETZEN" zu wechseln. Drücken Sie mehrfach SELECT, um zu "PREIS" zu wechseln. In der untere Zeile der LCD wird "PREIS" angezeigt.
2	MITSUBISHI ELECTRIC PREIS/kWh EINST. 043.4EUR¢/kWh POWER MODE SELECT ENTER ■ 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	 Drücken Sie ENTER. Sie können jetzt einen Einheitspreis in den Wechselrichter eingeben. Der Bereich, in dem der Preis eingegeben werden kann, blinkt.
3	MITSUBISHI ELECTRIC PRE I S / kWh E I NST . 0/4/3 . 4 EUR ¢ / kWh PRIVER MCCE SELECT ENTER • • • • • • • • • • • • • • • • • • •	 Drücken Sie MODE, so beginnt die nächste Stelle (nach rechts) zu blinken. Jedes Mal, wenn SELECT gedrückt wird, ändert sich die blinkende Zahl. → 1 → 2 → …9 → 0 - Wiederholen Sie die Enter, bis der korrekte Wert erscheint.
4	MITSUBISHI ELECTRIC SETZEN PRE I S POWER MODE SELECT ENTER O O O O O O O O O O O O O O O O O O O	Drücken Sie ENTER, um den Einheitspreis zu übernehmen. (Der Wechselrichter springt jetzt auf den Schritt 1 zurück.)

5.3.6 Einrichten der Adressnummer

Für die externe Kommunikation muss dem Wechselrichter eine Adresse zugeordnet werden. Ansonsten sind hier keine Einstellungen erforderlich.



	Anzeige	Vorgehensweise
3	MITSUBISHI ELECTRIC SETZEN ADRESSE (101) POWER MICE SELECT ENTER Blinkt	 Jedes Mal, wenn SELECT gedrückt wird, ändert sich die blinkende Zahl. → 1 → 2 → …9 → 0 – Drücken Sie MODE, so beginnt die nächste Stelle zu blinken. Wiederholen Sie die Eingabe, bis der gewünschte Wert, zwischen 1 und 30, erscheint.
4	MITSUBISHI ELECTRIC SETZEN ADRESSE	Drücken Sie ENTER, um die Adresse zu übernehmen. (Der Wechselrichter springt jetzt auf den Schritt 1 zurück.)

6 Wartung

6.1 Tägliche Wartung



Schalten Sie den AC- und den DC-Trennschalter aus, bevor Sie die tägliche Wartung durchführen. (Sonst kann ein Stromschlag die Folge sein.)



Verwenden Sie kein Öl oder nachfolgend aufgelistete Reinigungsmittel, um den Wechselrichter zu säubern.
Verdünner, Alkohol, Benzol, Benzin, Petroleum, Sprays, Reinigungsmittel usw.
Das Gehäuse kann sich verfärben und beschädigt werden.
Wischen Sie den Wechselrichter nicht mit einem nassen Tuch ab. Hierdurch kann es zu einem Stromschlag kommen.
Tragen Sie Handschuhe, wenn Sie den Wechselrichter abwischen. Kanten, wie an der Lüftungsöffnung usw., können zu Verletzungen führen.

Berühren Sie die Lüftungsöffnung des Wechselrichters nicht, während er arbeitet oder kurz nachdem er abgeschaltet wurde. Sie kann über 60°C warm sein. Hierdurch können Sie sich verbrennen.

Führen Sie die tägliche Wartung des Wechselrichters wie folgt aus:

- Vorbereitung

- 1. Halten Sie den EIN/AUS-Schalter für mindestens 2 Sekunden, um den Wechselrichter zu deaktivieren (siehe Seite 14).
- 2. Schalten Sie den DC-Trennschalter AUS.
- 3. Schalten Sie den AC-Trennschalter AUS.
 - Saugen Sie regelmäßig den Staub aus der Lüftungsöffnung, mindestens alle drei Monate. Verstopfte Öffnungen behindern die Lüftung des Wechselrichters und die Leistung sinkt.

Beseitigen Sie Schmutz auf der Anzeige mit einem trockenen Tuch, o.ä.

Prüfen Sie den Wechselrichter regelmäßig, zumindest einmal im Jahr auf Fehler und Verschleiß.

Reinigen der Lüftungsöffnung

Schalten Sie den Wechselrichter aus. Schalten Sie den AC- und den DC-Trennschalter AUS.

Die Öffnungen sind direkt nach dem Ausschalten noch heiß. Warten Sie daher mehrere Minuten, ehe Sie die Öffnungen reinigen.

% Reinigen Sie NUR die Lüftungsöffnung auf der rechten Seite des Wechselrichters.
Öffnen Sie die linke Seite des Wechselrichters NICHT.





Schalten Sie, wenn Sie die täglichen Wartungsarbeiten beendet haben, den AC- und den DC-Trennschalter wieder ein.

Drücken und halten Sie dann die EIN/AUS-Taste für mindestens 2 Sekunden, um den Wechselrichter zu aktivieren.
6.2 Tägliche Überprüfungen

Wenn Sie bei den täglichen Überprüfungen folgendes feststellen, wenden Sie sich bitte an Ihren Händler.

(1) Erzeugte Energie prüfen

Wird der Energiebalken angezeigt, wenn die Solarzellenmodule von der Sonne angestrahlt werden?

•Wird die Energie kumuliert?

(2)Fehler-LED prüfen

• Leuchtet die Fehler-LED?

Schaltet sich die Fehler-LED ein?

Bitte prüfen Sie, besonders im ersten Jahr, den Wechselrichter täglich, damit keine Fehler auftreten.

6.3 Fehler!?

•Etwa 70 bis 80& der Leistung Ihrer Solarzellenmodule können in der Regel die maximal mögliche Energie erzeugen. (Dieser Wert kann niedriger liegen, wenn Teile öfter im Schatten liegen oder wenn die Gesamtleistung nachlässt.)

●Ist die Umgebungstemperatur sehr hoch, sinkt die Ausgangsleistung sehr stark ab..

•Arbeitet der Wechselrichter nicht, leuchtet die Fehler-LED oder wird ein Fehlercode angezeigt, versuchen Sie, anhand der folgenden Tabelle, das Problem zu beseitigen.

Anzeige	Ursache	Beseitigung
Es wird keine Information eingezeigt.	Während der Nacht oder bei zu geringer Einstrahlung werden auf der LCD keine Informationen angezeigt.	Ist die Sonneneinstrahlung stark genug, erscheinen auf der Anzeige Informationen.
	Ist der DC-Trennschalter ausgeschaltet?	Schalten Sie den DC-Trennschalter ein.
MONITOR 20sec wird angezeigt.	Gab es einen Stromausfall?	2 bis 5 Minuten nachdem der Strom wieder anliegt, beginnt der Wechselrichter automatisch wieder mit der Erzeugung von
NETZAUSFALL	Gab es einen Stromausfall?	Energie.
wird angezeigt.	Ist der AC-Trennschalter ausgeschaltet?	Schalten Sie den AC- Trennschalter ein. Nach 2 bis 5 Minuten beginnt der Wechselrichter ohne Bedienereingriff wieder mit der Erzeugung von Energie.
ERROR-LED leuchtet (Typisch) STOERUNG E-09 wird angezeigt.	Sicherheitseinrichtung aktiviert.	Drücken und halten Sie danach die POWER-Taste für mindestens 2 Sekunden, um den Wechselrichter auszuschalten. Drücken und halten Sie danach die POWER-Taste für mindestens 2 Sekunden, um den Wechselrichter neu zu starten. Vergewissern Sie sich, dass die ERROR-LED aus ist und keine Fehlercode angezeigt wird.

Anzeige	Ursache	Beseitigung
BITTE FILTER REINIGEN! blinkt.	Blinkt in bestimmten Intervallen, um Sie darauf aufmerksam zu machen, die Lüftungsöffnung auf Verschmutzung zu prüfen. Ist die Lüftungsöffnung verstopft?	Drücken Sie ENTER. Die Anzeige "BITTE FILTER REINIGEN!" hört auf zu blinken. Details zur Reinigung der Lüftungsöffnung finden Sie auf Seite 33.
BITTE FILTER REINIGEN! blinkt weiter. Durch die ENTER-Taste wird keine Bestätigung ausgelöst.	Die Innentemperatur ist zu hoch. Ist die Lüftungsöffnung verstopft?	Informationen zur Reinigung der Lüftungsöffnung finden Sie auf Seite 33. Schaltet das System in den normalen Betriebsmodus zurück, erlischt die Anzeige "BITTE FILTER REINIGEN!"
Niedrige Ausgangsleistung	Ist die Lüftungsöffnung verstopft?	Informationen zur Reinigung der Lüftungsöffnung finden Sie auf Seite 33.
ZEIT EINSTELLEN! ENTER DRUECKEN blinkt.	Datum und Zeit sind nicht eingestellt.	Drücken Sie ENTER. Der Modus zur Eingabe von Datum und Zeit wird aufgerufen. Stellen Sie das Datum und die Uhrzeit ein. Details zur Einstellung finden Sie im Kapitel "5.3.3 Einstellen von Datum und Uhrzeit" (Seite 27).

Wenn keine der Anweisungen bei der Lösung des Problems geholfen hat, gehen Sie wie folgt vor und wenden sich an Ihren Händler zur Reparatur oder Überprüfung.

 Drücken und halten Sie die POWER-Taste f
ür mindestens 2 Sekunden, um den Wechselrichter zu stoppen

•Schalten Sie den AC- und den DC-Trennschalter aus.

7 Technische Daten

7.1 Spezifikationen

(1) Eingang

Teil	PV-PNS04ATL-GER PV-PNS06ATL-GER		
Max. Eingangsleistung	700 VDC		
Min. Eingangsspannung:	150 VDC		
Max. Eingangsstrom	18.0A DC		
Anschließbare Strings	3	}	

(2) Ausgang

Teil	PV-PNS04ATL-GER	PV-PNS06ATL-GER	
Nennleistung	3.3kW	4.6kW	
Max. Ausgangsleistung	3.5kW	5.0kW	
Nennspannung	230 VAC		
Max. Ausgangsstrom	15.2A AC	21.7A AC	
Arbeitsbereich, aktives	bei sich stabilisierenden Werten,		
Netz angeschlossen	OVR, UVR, OFR und UFR		
Anaphia@hara Natza	Eine Phase, 230 VAC		
Anschliebbare Nelze	(anschließbar über ein Einphasensystem)		

(3) Solarstrom-Wechselrichter

Teil	PV-PNS04ATL-GER PV-PNS06ATL-GER		
Umgebungsbedingungen	Innen (-25 - +60 °C)		
Max. Konvertierungseffizienz	96.	2%	
EUROPÄISCHE Konvertierungseffizienz	95.1%	95.4%	
MPPT-Bereich	160-65	0 VDC	
Ausgangsleistungsfaktor Grundwelle	95% (0,4 kW oder höher,	exkl. mit Phasenvorlauf)	
Klirrfaktor	5% insgesamt; einzeln	3% (bei Nennleistung)	
Stromverbrauch nachts	0.5W		
Geräuschentwicklung	1m von der Front 45 dB(A)		
Konvertierungssystem	Spannungsabhängige Stromregelung		
Schaltsystem	Sinuskurven-PWM-System		
Erdungssystem	Isoliertes (eisenloses) System		
Leistungsregelung	Arbeitet in den Bereichen; max. Ausgangsleistung, max Ausgangsstrom und max. Eingangsstrom. Steigt die Innentemperatur jedoch auf 78 °C, wird die Ausgangsleistung auf 30% (oder 100-30%) der max. Ausgangsleistung begrenzt.		
Stromaufnahmeregelung	Die Regelung erfolgt so, dass der Eingangsstrom den max. Eingangsstrom nicht überschreiten kann.		
Automatischer Start & Stop	Durch Start- und Stoppsequenz		
Lüfterregelung	Die Lüfterregelung auf Innentemperatur und c steuert den Luftstrom.	grund der Ier Ausgangsleistung	

(4) Verhältnis Ausgangsleistung zu Effizienz



(5) Blockdiagramm

Unten finden Sie ein Blockdiagramm über den Aufbau des Solarstrom-Wechselrichters.



Deutsch

7.2 Fehlercodes

Es besteht die Möglichkeit gängige Netzfehler für ein bestimmtes Land auf dem Wechselrichter anzuzeigen.

Anzeige der Schutzfunktionseinstellung für das Netz

Code	Beschreibung
E-00	Interner Schalter arbeitet nicht korrekt.
E-05	Konfiguration und Einstellungen wurden beim Start des System nicht korrekt geladen.
E-07	Innentemperatur kann nicht erkannt werden.
E-08	Regelkreis der Inneneinheit arbeitet nicht korrekt.
E-09	Extrem hohe Innentemperatur erkannt.
E-20	Eingangsspannung hat dem Maximalwert überschritten.
E-24	Überstrom am Ausgang aufgetreten.
E-25	Überspannung am Ausgang aufgetreten.
E-26	Spannungsabfall am Ausgang aufgetreten.
E-28	Gleichstromüberlappung mit Ausgangsstrom
E-29	Masseschluss aufgetreten.
E-30	Booster-Regelkreis arbeitet nicht korrekt.
E-31	Masseschlusserkennung arbeitet nicht korrekt.
E-35	Sicherung ist durchgebrannt.
E-37	Fehler im Booster-Regelkreis.

Code	Beschreibung
E-42	Abfallender Isolationswiderstand erkannt.
E-43	Fehler im Booster-Regelkreis.
E-44	Vorgabeeinstellung(en) falsch.
E-62	Überspannung im Booster-Regelkreis.
E-64	Überstrom im Wechselrichterkreis.
E-66	Überspannung am Ausgang aufgetreten (mit hohem Wert).
E-72	Überspannung am Booster-Regelkreis aufgetreten (mit hohem Wert).
E-73	Überstrom am Schaltelement aufgetreten.

8 Glossar

AC				
	Abkürzung für Wechselstrom			
Menge				
	Menge des an den Netzbetreiber verkauften Stroms			
CO2-Minderu	ng Menge der CO2-Minderung durch die Solarzellen des sonst erzeugten CO2.			
DC	Abkürzung für Gleichstrom			
Gleichstromü	berlagerung Am Ausgang des Wechselrichters wurden Gleichstromelemente festgestellt.			
Massefehler				
	Erkennung eines Massefehlers durch den Solarstrom-Wechselrichter.			
Energie	Kumulierte durch den Solarstrom-Wechselrichter erzeugte elektrische Energie.			
Eingangsspar	nnung Eingangsspannung des Solarstrom-Wechselrichters.			
LCD				
	Abkürzung für Flüssigkeitskristallanzeige. Verschiedene Betriebsanzeigen des Solarstrom-Wechselrichters werden auf der integrierten LCD angezeigt.			
Ausgangstron	n			
	Ausgangsstrom des Solarstrom-Wechselrichters.			
Ausgangsleis	t ung Ausgangsleistung des Solarstrom-Wechselrichters.			
Gekaufte Ene	rgie Vom Stromversorger für den Betrieb der Haushaltsgeräte gekaufte Energie.			
PV				
	Abkürzung für Fotoelektrisch Neues Wort für Solarenergie.			
Solarzelle				
	Ein elektronisches Bauteil, das Energie erzeugt, wenn es angestrahlt wird. Mehrere Solarzellen, die miteinander verbunden sind, ergeben eine Solarzellenmodul.			
Solarenergie				
	Energie in Form von Strahlung von der Sonne, bestehend aus Wärme und ultraviolettem Licht.			
Verkaufte Energie				
	Durch den Solarstrom-Wechselrichter erzeugte und an den Stromversorger verkaufte Energie.			
String				
	Eine Gruppe von in Reihe geschalteten Solarzellenmodulen.			
Kumulierte Er	nergie Durch das Solarstromsystem erzeugte Gesamtenergie vom Zeitpunkt der Installation des Solarstrom-Wechselrichters an gerechnet.			

9 Stromerzeugungsaufzeichnung

Tragen Sie in der nachfolgenden Tabelle den erzeugten und verkauften Strom ein. Hierdurch erleichtern Sie sich die Überwachung Ihres Wechselrichters. Verwahren Sie eine Kopie dieser Aufzeichnungen, damit die Daten bei einem Ausfall des Wechselrichters nicht verloren gehen. Anderenfalls kann niemand mehr die verloren gegangenen Informationen des Wechselrichters wiederherstellen.

- Notieren Sie in der Spalte "Erzeugte Energie" den Wert der im Vormonat erzeugten Energie (im Anzeigemodus "MONAT"). Da der Wechselrichter kein Messgerät ist, sind diese Angaben immer nur N\u00e4herungswerte.
- Notieren Sie in der Spalte "Verkaufte Energie" den Betrag, der Ihnen vom Stromversorger gutgeschrieben wurde. Sie können auch Werte für einen vorgegebenen Tag eines Monats aufzeichnen.

JJ MM TT	Erzeugte Energie (kWh)	Verkaufte Energie (kWh)	Gekaufte Energie (kWh)

JJ MM TT	Erzeugte Energie (kWh)	Verkaufte Energie (kWh)	Gekaufte Energie (kWh)
<u></u>			

Deutsch

MITSUBISHI ELECTRIC CORPORATION



PHOTOVOLTAIC INVERTER MODEL **PV-PNS04ATL-GER PV-PNS06ATL-GER**

Operation Manual



Please read this manual carefully to use the Photovoltaic inverter (PV inverter) in a correct and safe manner. Please pay particular attention to the section "Safety Precautions" before using the PV inverter.

●The manual should always be readily available to the operator of the PV inverter. The PV inverter PV-PNS04ATL-GER / PV-PNS06ATL-GER is designed to the regulations stipulated in DIN VDE 0126-1-1. Therefore, the owner may use the PV inverter only in countries or areas where such regulations are applicable.

for Users

Table of Contents

Page

In	troduction
1	Safety Precautions
2	Applicable Standards
3	Configuration of PV System $\dots\dots\dots\dots55{\sim}56$
4	PV Inverter Parts and Their Names
	4.2 Display Panel
	4.3 Cable Glands
5	Operating the PV Inverter
	5.1 Operating Procedure
	5.1.1 Start (Turn on) 59
	5.1.2 Stop (Turn off) 60
	5.2 Viewing Operating Status 61~64
	5.2.1 Viewing LCD and LEDs \cdots 61 \sim 63
	5.2.2 Actions When Error LED Turns On 64
	5.3 Viewing Operation Data
	5.3.1 Selecting Display Item
	5.3.2 Description of Display Items
	5.3.3 Setting Current Date and Time (24 Hour Clock) 73
	5.3.4 Setting Display Language 74
	5.3.5 Setting Unit Price for Selling Energy
	5.3.6 Setting Address Number · · · · · · · · · · · · · · · · · · ·
6	Maintenance
	6.1 Daily Care
	6.2 Daily Checks
	6.3 Failure!?

7	Technical Data	4~89
	7.1 Specifications	4~86
	7.2 Error Codes	7~88
8	Glossary	89
9	Generation Record	0~91

Introduction



Thank you for selecting the PV inverter PV-PNS04ATL-GER / PV-PNS06ATL-GER. This manual illustrates the operation of the PV inverter PV-PNS04ATL-GER / PV-PNS06ATL-GER. Please use this manual as a guide to enjoy the wealth of features offered by the PV inverter.

Installation of the PV inverter PV-PNS04ATL-GER / PV-PNS06ATL-GER is illustrated in the separate "Installation Manual for PHOTOVOLTAIC INVERT-ER PV-PNS04ATL-GER / PV-PNS06ATL-GER".

English

1 Safety Precautions

• The following symbols denote the type and degree of danger that may result from incorrect use.

	Alerts you of the danger of death or serious injury anticipated if the PV inverter				
Important	Before working on the PV inverter, always press the Power switch on the PV inverter to stop running. Turn off both the AC and DC disconnectors. Electric shock may result.				
	Do not leave faulty PV inverter unseen to. If any fume or abnormal odor is detected, first turn the equipment off with its power switch. Second, turn off both the AC and DC disconnectors. Then, contact your dealer.				
\bigcirc	Do not use the PV inverter in purposes other than PV generation. Fire, electric shock, or injury may result.				
Prohibited	Do not inspect the PV inverter yourself. Electric shock may result.				
	Do not place or feed any metal or water into the ventilation opening of the PV inverter. Electric shock may result.				
	Do not climb or hang on the PV inverter. It may fall, resulting in injury.				
Don't disassemble or modify	Do not disassemble or modify the PV inverter. Fire, electric shock, or injury may result.				
	Do not touch the PV inverter during a thunderstorm or a natural disaster. Electric shock may result.				
Don't touch	Do not open the front panel of the PV inverter. Touching the inside of the PV inverter could cause an electric shock.				

	Warns you of potential injury or damages anticipated to the building or household stuff if the PV inverter is worked on in the wrong manner.					
	Do not place any thing on the PV inverter. Do not obstruct the ventilation opening of the PV inverter. Fire, electric shock, or injury may result.					
\bigcirc	Do not expose the PV inverter to cold air or steam. Any accumulated frost could cause faulty current or burnout.					
Prohibited	Do not run the PV inverter in the vicinity of high-frequency equipment such as walkie-talkies. A glitch could cause burnout.					
	Do not wipe the PV inverter with a wet cloth. Electric shock may result.					
Important	Wear gloves when wiping the PV inverter. Edges such as the ventilation openings may cause injury.					
Don't touch	Do not touch the PV inverter's ventilation opening or its surroundings when running, or immediately after stopped running. It can be higher than 60°C. Burn may occur.					

Do not install the PV inverter in the following places:

(Otherwise, the PV inverter may fail or its safe use may be impeded. The product warranty shall also be voided.)

- Outdoors, or places similar to outdoors (***It is PROHIBITED to install the PV inverter in places unable to be separated from outdoor environment, such as garage open at one side, no wall or door able to block such side, provided.)
- · Places where it is exposed to direct sunlight
- · Narrow places lacking ventilation
- · Places where it is exposed to water
- · Places where humidity is significantly high such as lavatory or bathroom
- · Places where excessive steam, oil vapor, smoke, dust, or corrosive substance is present
- · Places where it is exposed to oily smoke, such as a kitchen
- · Places where explosive or flammable gases are present
- · Places installations are exposed to vibration or shock
- · Places in the vicinity of flammable materials
- Places with unusual conditions other than those indicated above (such as seafaring vessels or motor vehicles)
- · Places where damage from salt air could occur

Note

Avoid installing the PV inverter in the following places:

(Otherwise, the PV inverter might cause appliances to generate noises.)

- \cdot Places where noises or electric noises are under strict control
- · Places in the vicinity of television or radio antennas or cables

2 Applicable Standards

Your PV inverter complies with the rules and regulations stipulated by LVD, EMC, and CE. It also complies with the regulations defined in EN and DIN VDE 0126-1-1. The PV inverter also meets the provisions defined regarding electromagnetic compatibility (EMC) and low voltage directive (LVD) as certified in the CE declaration.

Information on Disposal



Note: This symbol mark is for EU countries only.

This symbol mark is according to the directive 2002/96/EC Article 10 Information for users and Annex IV.

Your MITSUBISHI ELECTRIC product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their endof-life, should be disposed of separately from your household waste.

Please, dispose of this equipment at your local community waste collection/recycling centre.

In the European Union there are separate collection systems for used electrical and electronic product.

Please, help us to conserve the environment we live in !

3 Configuration of PV System

Overview of Basic System



The PV inverter converts direct-current energy generated by Photovoltaic modules (PV modules) into alternating-current energy, and provides it for use with the grid.



1) Photovoltaic module (PV module)

This converts solar light energy into direct-current energy.

A group of solar cells makes up a PV module.

A group of PV modules is called a PV module array.



② DC disconnector

This is inserted between the PV module and the PV inverter, makes or breaks the circuit on the PV module side.



3 PV inverter

This converts direct-current energy generated by the PV module into alternating-current energy.

4 AC disconnector

This is inserted between the grid and the PV inverter, makes or breaks the circuit on the grid side.

4 PV Inverter Parts and Their Names (PV-PNS04ATL-GER / PV-PNS06ATL-GER)

4.1 Appearance



4.2 Display Panel

The display panel includes one LCD, three LEDs, and four switches. They allow you to view a variety of operation data, and to perform necessary operations on the PV inverter.



4.3 Cable Glands

The PV inverter has the following cable glands.



(4) Communications line (optional) gland

5 Operating the PV Inverter (PV-PNS04ATL-GER / PV-PNS06ATL-GER)

The following illustrates the operation of the PV inverter.

5.1 Operating Procedure

The operating procedure to start or stop the PV inverter is illustrated below.

5.1.1 Start (Turn on)

	Display panel	Procedure
1		When the PV inverter is inactive, press and hold the POWER switch for 2 sec- onds or longer. • The PV inverter starts up, with the
		"gate" displayed on the LCD starting to open.
	START	The LCD displays "START" for 3 sec- onds, and then switches to the display in STATUS mode
2	+	
	PLEASE WAIT 12345kWh	
	(For: Preparing itself for running)	
		Afterwards the LCD displays informa- tion such as messages, state of power
3	RUNNING 12345 kWh	generation, total generated energy, etc., available in its modes of operation.
	(For: Running with the grid connected)	For details, refer to "5.2 Viewing Operating Status".

After turning on inverter, the PV inverter automatically runs depending on amount of sunlight.

5.1.2 Stop (Turn off)

To stop the PV inverter, use the following procedure.

	Display panel	Procedure
		When the PV inverter is running, press
		the POWER switch for 2 seconds or
	12345kWh	longer.
	POWER MODE SELECT ENTER	
1		
	STOP	\cdot This stops the PV inverter and
		"STOP" is displayed for 3 seconds.
	→ ←	The "gate" starts closing on the LCD.
2		
2		
		The PV inverter stops.
0		· "" on the LCD indicates the BV
3		inverter is inactive

The PV inverter displays on its LCD and LEDs the status as dictated by its operating condition in that instance. All of the LCD and LEDs are off during the night or at a time when little sunlight is present. This is caused by the power source turned off on the PV inverter.

5.2.1 Viewing LCD and LEDs

Each operating status displayed on the LCD and LEDs is listed below.

- ** LED: $\stackrel{\frown}{=}$ denotes on, $\stackrel{\frown}{=}$ denotes flashing, and \bigcirc denotes off.
- * A numerical value is shown on the lower right-hand side of the LCD representing the generated energy in kWh.

STOP (Turn off)

	LED			Description
LCD	POWER	GRID	ERROR	Description
(Display is off)	0	0	0	The LCD and all LEDs are off during times in which (1) little sunlight is present such as at night, or (2) the DC disconnec- tor is off. This is caused by the power source turned off on the PV inverter.
	0	0	0	The PV inverter has "stopped" running. Operating the POWER switch will turn on the PV inverter.

RUN <Waiting> (Turn on)

	LED			Description
	POWER	GRID	ERROR	Description
PLEASE WAIT 12345kWh		0	0	The PV inverter is in the prepara- tion stage for generating power. The PV inverter then starts running.
LOW INPUT POWER			0	The irradiation level has tem- porarily dropped. The PV invert- er is on standby until the irradi- ation returns to a certain level.
1204010		0	0	Since it is low on irradiation, the PV inverter avoids running in a mode in which the grid is connected.
BLACKOUT 12345kWh		0	0	A blackout is encountered, or the AC disconnector is off.
STANDBY 12345kWh Flashing		0	0	The grid-protection function is active. The PV inverter is on standby, waiting until the grid is restored to its normal level.
STANDBY 20sec 12345kWh		0	0	The grid-protection function is active. The numerical value on the upper right-hand side of the LCD denotes the time in sec- onds until the PV inverter resumes the generation of power.



	LED			Description
LCD	POWER	GRID	ERROR	Description
RUNNING ∎∎∎∎ 12345 kWh			0	Power is being generated. The power bar on the lower left- hand side of the LCD illustrates current power being generated.

ERROR

	LED			Description
LOD	POWER	GRID	ERROR	Description
(Typical) ERROR E - 24 1 2 3 4 5 kWh		0		A failure in the grid or in the PV generation system that has activated the built-in safety device is indicated. The [E-00](00 for number) on the upper right-hand side corre- sponds to an error code.For error codes, see p.87 "Error Codes."

If the Error LED is on, follow the procedure described in p.64 "Actions When Error LED Turns On."

5.2.2 Actions When Error LED Turns On

The following action should be taken if the ERROR LED is illuminated.

Display panel	Procedure
	1. Press the POWER switch for 2
	seconds or longer to turn off the
	PV inverter.
	2. Make sure that "" is displayed,
	and then press the POWER switch
	again for 2 seconds or longer to
	restart the PV inverter.

If the procedures illustrated above do not remedy the error (i.e., the ERROR LED turns on again), then take the following action.

Display panel	Procedure
	 Press the POWER switch for 2 seconds or longer to turn off the PV inverter.
POWER MODE SELECT ENTER	 2. Turn off the DC disconnector. 3. Turn off the AC disconnector. 4. Contact your dealer for repair.

5.3 Viewing Operation Data

5.3.1 Selecting Display Item

In addition to the operating status illustrated in 5.2, you can monitor a variety of operation data on the LCD.

- (1) Current operation data: output power, input voltage, grid voltage, output current, (today's) maximum output power, date and time
- (2) Total cumulative data: total generated energy, amount, CO₂ reduction, operating hours
- (3) Daily operation data: today's generated energy, amount, CO₂ reduction, operating hours, yesterday's generated energy
- (4) Monthly operation data: this month's generated energy, amount, CO2 reduction, operating hours, last month's generated energy
- (5) Annual operation data: this year's generated energy, amount, CO2 reduction, operating hours, last year's generated energy

Also, you set information relevant to the items such as date and time while bringing them up on the LCD.

You can select the items by operating the MODE or SELECT switch.

However, it reverts to STATUS display if 30 seconds and more passe without any actions. The following table illustrates the relationships between the modes and their display items.



You can select each mode by pressing the MODE switch.

You can select item under each mode by pressing the SELECT switch.





English

5.3.2 Description of Display Items

Operation data viewable in connection with the display items are described below.

PRESENT (Current value display mode)

PRESENT

- 1. Press the MODE switch several times to show "PRESENT" on the upper left-hand side of the LCD.
- 2. Press the SELECT switch to bring up the item you want to view. The item comes up in the following order.

Display Item	LCD	Description
Output power	PRESENT 2.9kW OUTPUT POWER	(Instantaneous value for) Output power is displayed in the upper right-hand side. (2 digit integer, 1 digit decimal, unit: kW)
Input voltage	PRESENT 452.2Vdc INPUT VOLTAGE	(Instantaneous value for) Input voltage present on the PV module is displayed in the upper right-hand side. (3 digit integer, 1 digit decimal, unit: Vdc)
Grid voltage	PRESENT 230.2Vac GRID VOLTAGE	(Instantaneous value for) Grid voltage is displayed in the upper right-hand side. (3 digit integer, 1 digit decimal, unit: Vac)
Output current	PRESENT 12.8Aac OUTPUT CURRENT	(Instantaneous value for) Current output from the PV inverter is dis- played in the upper right-hand side (3 digit integer, 1 digit decimal, unit: Aac)
Maximum output power	PRESENT 3.0kW MAX OUTPUT TODAY	Maximum output power for today is displayed in the upper right-hand side. (2 digit integer, 1 digit decimal, unit: kW)
Date and time (24 Hour clock)	TIME 15:21:34 25 AUG 2006	(Current) Hour, minute, and second is displayed in the upper right-hand side. (Current) Day, month, and year is displayed on the lower line.

•TOTAL (Total cumulative value display mode)

TOTAL

- 1. Press the MODE switch several times to show "TOTAL" in the upper left-hand side of the LCD.
- 2. Press the SELECT switch to bring up the item you want to view. The item comes up in the following order.

Display Item	LCD	Description
Total generated energy	TOTAL 12345kWh GENERATED ENERGY	Total cumulative generated energy is displayed in the upper right-hand side. (5 digit integer, Unit: kWh)
Total amount	TOTAL 5360EUR AMOUNT	Total amount of electrical energy sold to the utility company is dis- played in the upper right-hand side. (5 digit integer, Unit: EUR)
Total CO2 reduc- tion	TOTAL 2185kgC CO2 REDUCTION	Total quantity of CO ₂ reduced by the PV system is displayed in the upper right-hand side. (5 digit integer, Unit: kgC)
Total operating hours	TOTAL 14002hr OPERATING HOURS	Total operating hours is displayed in the upper right-hand side. (5 digit integer, Unit: hr)

•DAY (Daily cumulative value display mode)

DAY

- 1. Press the MODE switch several times to show "DAY" in the upper left-hand side of the LCD.
- 2. Press the SELECT switch to bring up the item you want to view. The item comes up in the following order.

Display Item	LCD	Description
Today's generat- ed energy	DAY 26 kWh GENERATED ENERGY	Today's generated energy is dis- played in the upper right-hand side. (5 digit integer, Unit: kWh)
Today's amount	DAY 11EUR AMOUNT	Amount of energy sold today is dis- played in the upper right-hand side. (5 digit integer, Unit: EUR)
Today's CO2 reduction	DAY 5kgC CO2 REDUCTION	Today's quantity of CO2 reduced by the PV system is displayed in the upper right-hand side. (5 digit integer, Unit: kgC)
Today's operating hours	DAY 10hr OPERATING HOURS	Today's operating hours is displayed in the upper right-hand side. (5 digit integer, Unit: hr)
Yesterday's gen- erated energy	DAY 23 kWh YESTERDAY ENERGY	Yesterday's generated energy is dis- played in the upper right-hand side. (5 digit integer, Unit: kWh)
MONTH (Monthly cumulative value display mode)

MONTH

- 1. Press the MODE switch several times to show "MONTH" in the upper left-hand side of the LCD.
- 2. Press the SELECT switch to bring up the item you want to view. The item comes up in the following order.

Display Item	LCD	Description
This month's gen- erated energy	MONTH 297 kWh GENERATED ENERGY	This month's generated energy is dis- played in the upper right-hand side. (5 digit integer, Unit: kWh)
This month's amount	MONTH 129EUR AMOUNT	Amount of energy sold this month is displayed in the upper right-hand side. (5 digit integer, Unit: EUR)
This month's CO2 reduction	MONTH 53kgC CO2 REDUCTION	This month's quantity of CO2 reduced by the PV system is dis- played in the upper right-hand side. (5 digit integer, Unit: kgC)
This month's operating hours	MONTH 300hr OPERATING HOURS	This month's operating hours is dis- played in the upper right-hand side. (5 digit integer, Unit: hr)
Last month's gen- erated energy	MONTH 285kWh OCT 2006 ENERGY	Last month's generated energy is dis- played in the upper right-hand side. (5 digit integer, Unit: kWh)

•YEAR (Annual cumulative value display mode)

YEAR

- 1. Press the MODE switch several times to show "YEAR" in the upper left-hand side of the LCD.
- 2. Press the SELECT switch to bring up the item you want to view. The item comes up in the following order.

Display Item	LCD	Description
This year's gener- ated energy	YEAR 3218kWh GENERATED ENERGY	This year's generated energy is dis- played in the upper right-hand side. (5 digit integer, Unit: kWh)
This year's amount	YEAR 1397EUR AMOUNT	Amount of energy sold this year is dis- played in the upper right-hand side. (5 digit integer, Unit: EUR)
This year's CO2 reduction	YEAR 570kgC CO2 REDUCTION	This year's quantity of CO ₂ reduced by the PV system is displayed in the upper right-hand side. (5 digit integer, Unit: kgC)
This year's oper- ating hours	YEAR 3650hr OPERATING HOURS	This year's operating hours is dis- played in the upper right-hand side. (5 digit integer, Unit: hr)
Last year's gener- ated energy	YEAR 3302kWh 2005 ENERGY	Last year's generated energy is dis- played in the upper right-hand side.The year is displayed in the lower left-hand side. (5 digit integer, Unit: kWh)

5.3.3 Setting Current Date and Time (24 Hour Clock)

	Display panel	Procedure	
1	MITSUBISHI ELECTRIC SETUP DATE / TIME POWER MODE SELECT ENTER O O O O O O O O O O O O O O O O O O O	 Press the MODE switch several times until the "SETUP" mode is displayed. "SETUP" is displayed in the upper left- hand side of the LCD. "DATE/TIME" is displayed on the lower row, telling you are in the date/time setting mode. 	
2	MITSUBISHI ELECTRIC TIME 15:21:34 25 AUG 2006 POWER MODE ELECT ENTER ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●	 Press the ENTER switch. The PV inverter becomes ready to accept settings. "Hour, minute, second" and "day, month, and year" currently registered on the PV inverter is displayed. The denary digit starts flashing. 	
3	MITSUBISHI ELECTRIC TIME 15:21:34 25 AUG 20116 POWER MODE SELECT ENTER ■ MITSUBISHI ELECTRIC TIME 15:21:34 25 AUG 20016 POWER MODE SELECT ENTER ■ MODE SELECT ENTER	 Each push of the SELECT switch will switch the number of the denary digit: → 1 → 2 → …9 → 0 → Select the number you want to set on the PV inverter. Press the MODE switch. Now the first digit starts flashing (where you will set the desired number). Then repeat the same procedure with the MODE switch to choose the digit you wish to set, causing it to flash. Press the SELECT switch to bring up the number cor- responding to the desired date and time. 	
4	MITSUBISHI ELECTRIC SETUP DATE / TIME POWER MODE SELECT ENTER O O O O O O O O O O O O O O O O O O O	Press the ENTER switch to register the date and time you have just set. (The PV inverter reverts to step 1 above.)	

5.3.4 Setting Display Language

	Display panel	Procedure	
1	MITSUBISHI ELECTRIC SETUP LANGUAGE	 Press the MODE switch several times until the "SETUP" mode is displayed. Press the SELECT switch several times to enter "LANGUAGE" mode. "LANGUAGE" is displayed on the lower row of the LCD. 	
2	RIGHT MITSUBISHI ELECTRIC SETUP LANGUAGE ENGLISH OF THE SELECT ENTER FOWER Flashing	 Press the ENTER switch. The PV inverter becomes ready to accept settings. The language currently registered on the PV inverter is displayed and flashing on the lower row of the LCD. 	
3	RUNCE SELECT ENTER Flashing	Each push of the SELECT switch changes the display in such a way as "ENGLISH→GERMAN→ITALIAN".	
4	MISUBISHI ELECTRIC SETUP LANGUAGE POWER MODE SELECT ENTER O O O O O O O O O O O O O O O O O O O	With the language you want to set, displayed on the LCD, press the ENTER switch. This registers the set language on the PV inverter. (The PV inverter reverts to step 1 above.)	

5.3.5 Setting Unit Price for Selling Energy

	Display panel	Procedure	
1	CONTRACTOR OF CO	 Press the MODE switch several times until the "SETUP" mode is displayed. Press the SELECT switch several times to enter "Unit PRICE" mode. "UNIT PRICE" is displayed on the lower row of the LCD. 	
2	MITSUBISHI ELECTRIC SETUP UNIT PRICE 043.4EUR¢/kWh POWER MODE SELECT ENTER O O O O O O O O O O O O Flashing	 Press the ENTER switch. Your PV inverter is now ready for setting a unit price. The section in which you can set a unit price starts flashing. 	
3	MITSUBISHI ELECTRIC SETUP UNIT PRICE 043.4EUR¢/kWh PRWER MODE SELECT ENTER OF OF OF OF OF Flashing	 Pressing the MODE switch causes the next (or right-hand side) digit to start flashing. Each push of the SELECT switch changes the flashing number: → 1 → 2 → …9 → 0 → Repeat the procedure to bring up the desired number. 	
4	MITSUBISHI ELECTRIC SETUP UNIT PRICE POWER MODE SELECT ENTER ● ● ● ● ● ● ● ● ■ ■ ENTER • ● ● ● ● ● ● ● ● ■ ■ ■	Press the ENTER switch to register the set price. (The PV inverter reverts to step 1 above.)	

5.3.6 Setting Address Number - Communicating with External Devices

Communicating with an external device requires an address set on the PV inverter. Otherwise, this setting is not required.

	Display panel	Procedure	
1	MITSUBISHI ELECTRIC SETUP ADDRESS POWER MODE SELECT ENTER ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●	 Press the MODE switch several times until the "SETUP" mode is displayed. Press the SELECT switch to enter the "ADDRESS" mode. "ADDRESS" is displayed on the lower row of the LCD. 	
2	MITSUBISHI ELECTRIC SETUP ADDRESS (101) POWER MICE SELECT POWER MICE SELECT Flashing	 Press the ENTER switch. Your PV inverter is now ready for setting address number. The sec- tion in which you can set address number starts flashing. 	

	Display panel	Procedure	
3	MITSUBISHI ELECTRIC SETUP ADDRESS (101) POWER MODE SELECT ENTER • MITSUBISHI ELECTRIC SETUP ADDRESS (111) POWER MODE SELECT ENTER • MITSUBISHI ELECTRIC SETUP ADDRESS (111) • O • O • O • O • O • O • O • O • O • O	 Each push of the SELECT switch changes the flashing number: → 2 → …9 → 0 − Pressing the MODE switch causes another digit to start flashing. Repeat the procedure to bring up the desired number, some one between 1 and 30. 	
4	MTSUBISH ELECTRIC SETUP ADDRESS POWER MODE SELECT ENTER ● ● ● ● ● ● ● ● ● ● ■ ■ ■ ■ ■ ■ ■ ■ ■ ■	Press the ENTER switch to register the address number. (The PV inverter reverts to step 1 above.)	

6 Maintenance

6.1 Daily Care



Always turn off the AC and DC disconnectors, before performing daily care. (Electric shock could occur.)



Do not use oil, cleanser, or other such agents as listed below to clean the PV inverter.

Thinner, alcohol, benzene, gas, coal oil, spray cans, cleansers, etc. Discoloration or deterioration may result.

Do not wipe the PV inverter with a wet cloth. Doing so could result in an electric shock.

Wear gloves to wipe dry the PV inverter.

Edges around ventilation openings, etc., may cause injury.

Do not touch the PV inverter's ventilation opening or its surroundings when running or immediately after stopped running. It can be higher than 60° C.

Doing so could result in burns.

Perform daily care of the PV inverter as follows.

- Before working on

- 1. Hold the POWER switch for two seconds or more, to deactivate the PV inverter (See p.60).
- 2. Turn off the DC disconnector.
- 3. Turn off the AC disconnector.

Vacuum dust out of the ventilation opening regularly, or about every three months. Any clogged openings deteriorate ventilation through the PV inverter, lowering output power.

•Clean any contamination from the display with a dry cloth, or something similar.

Regularly, or at least annually, check for any failure or disengagement, or if the PV inverter has become off-plumb.

Cleaning Ventilation Opening

Turn off the PV inverter. Turn OFF the AC and DC disconnectors.

The openings are hot immediately after it is deactivated. So, wait for several minutes before cleaning the opening.

 $\ensuremath{\mathscr{C}}\xspace$ Clean the ventilation opening ONLY on the right side of the PV inverter.

DO NOT open the opening on the left side of the PV inverter.





When finished performing daily care, always turn on the AC and DC disconnectors. Then press and hold the power switch for 2 seconds or longer to ensure that the PV inverter is starting up.

English

6.2 Daily Checks

If your daily check detected any of the following, contact your dealer.

- (1)Check generated energy
 - Is the energy bar displayed when sufficient sunlight is incident on the PV module?
 - ●Is the cumulative generated energy being accumulated?

(2)Check error LED

●Is the error LED left on?

Does the error LED frequently turn on?

Please check the PV inverter on a daily basis, particularly in its initial year, in order to prevent any defects from occurring.

6.3 Failure!?

•A value somewhere between 70 and 80% of the capacity of your PV module can be used as a rule of thumb for maximum possible energy generated. (The value may be lower than the above mentioned in case where it is in the shadow or its installation has drawback.)

• If the ambient temperature is high, output power may drop extremely.

If the PV inverter does not work, its error LED is on, or an error code is displayed, please refer to the list of countermeasures in the table below.

Display	Cause	Remedy
No information is displayed.	No information is displayed on the LCD during the night or times when there is little incident sunlight.	If PV modules receive sunlight enough, the display shows information.
	Is the DC disconnector off?	Turn on the DC disconnector.
STANDBY 20sec is displayed.	Has there been a blackout?	From 2 to 5 minutes after power has returned, the PV inverter will start generating power automatically.
BLACKOUT	Has there been a blackout?	
is displayed.	Is the AC disconnector off?	Turn on the AC disconnector. After 2 to 5 minutes, the PV inverter will start generating power without any operator intervention.
ERROR LED is on. (Typical) ERROR E-09 is displayed.	Safety device is activated.	Press and hold the POWER switch for 2 seconds or longer to turn off the PV inverter. Next, press the POWER switch for 2 seconds or longer to restart the PV inverter. Then, make sure that the ERROR LED is off and no error code is displayed after starting to run.

Display	Cause	Remedy	
PLEASE CLEAN FILTER! flashes.	This flashes at fixed intervals to ask you to check whether the ventilation opening is clogged. Is the ventilation opening clogged?	Press the ENTER switch. The "PLEASE CLEAN FILTER!" stops flashing. Then, see p. 79 to clean the ventilation openings.	
PLEASE CLEAN FILTER! continues flashing. The ENTER switch does not turn off the prompt.	The internal temperature is too high. Is the ventilation opening clogged?	See p. 79 to clean the ventilation openings. When it reverts to its normal level, the "PLEASE CLEAN FILTER!" will be off.	English
Low output power	Is the ventilation opening clogged?	See p. 79 to clean the ventilation openings.	
NO DATE/TIME SET PRESS ENTER! flashes.	No current date and time are set.	Press the ENTER switch. This brings up the screen for setting the date and time. Set the date and time. The subsection "5.3.3 Setting Current Date and Time" (p. 73) serves as a reference.	

If, even after the above illustrated actions have been taken, the error persists, please do as follows and then contact your dealer for repair or checkup.

Press and hold the POWER switch for at least 2 seconds to stop the PV inverter.

•Turn off the AC and DC disconnectors.

7 Technical Data

7.1 Specifications

(1) Input

Item	PV-PNS04ATL-GER	PV-PNS06ATL-GER	
Max. DC voltage	700 VDC		
Min. DC voltage	150 VDC		
Max. input current	18.0A DC		
Max.numbers of strings	3		

(2) Output

Item	PV-PNS04ATL-GER	PV-PNS06ATL-GER	
Rated AC power	3.3kW	4.6kW	
Max. AC power	3.5kW	5.0kW	
Rated AC voltage	230 VAC		
Max. AC current	15.2A AC	21.7A AC	
Working range, active-	-		
grid connected	Opon stabilized values, OVR, OVR, OFR and OFR		
Grid connectable	Single-phase, pair, 230 VAC		
Gind connectable	(Connectable with single-phase pair system)		

(3) PV Inverter

Item	PV-PNS04ATL-GER PV-PNS06ATL-GER		
Ambient requirements	Indoor (-25 - +60℃)		
Max. efficiency at maximum voltage	96.	2%	
European weighted efficiency	95.1%	95.4%	
PV-voltage range, MPPT	160-65	0 VDC	
Output fundamental wave power factor	95% (0.4 kW or higher, excl. ru	unning with advanced phases)	
Harmonic current distortion factor	5% in all; 3% eac	h (at rated output)	
Power consumption at night	0.5W		
Noise level	45 dB 1m from front, characteristics A		
Conversion system	Voltage type current control system		
Switching system	Sinewave PWM system		
Grounding type	Isolated (transformerless) system		
	Works within the ranges; ma	ax. output power, max output	
Bower control	current, and max. input current. However, if the internal		
	temperature rises to 78°C, then the output will be limited		
	down to 30% (or 100-30%) of the maximum output power.		
Input current control	Controlled so as not to allow input current to surpass max. input current.		
Automatic start & stop	Upon start and stop sequence.		
	Controls the cooling fa	n based on the inter-	
Cooling fan control	nal temperature and output power, adjusting		
	the airflow.		

(4) Output power ratio vs. efficiency in graph form



(5) Block diagram

The block diagram for the PV inverter is shown below.



7.2 Error Codes

If any failed grid or your PV generation system has caused the ERROR LED to light up, displaying the error code, contact your dealer for repair. This subsection describes the typical error codes.

Code	Description		
E-00	Internal switch works in an abnormal manner.		
E-05	Configuration information incl. settings has been retrieved in an inappropriate manner when the system starts up.		
E-07	Internal temperature information cannot be detected.		
E-08	Control circuit works improperly.		
E-09	Extremely high internal temperature is detected.		
E-20	Input voltage surpassed the maximum input voltage.		
E-24	Overcurrent occurred in output.		
E-25	Overvoltage occurred in output.		
E-26	Dropped voltage occurred in output.		
E-28	Direct current overlapped with output current.		
E-29	Earth fault has occurred.		
E-30	Booster circuit works improperly.		
E-31	Earth-fault detecting circuit works improperly.		
E-35	Thermal fuse is blown.		
E-37	Error occurred in booster circuit.		

Code	Description		
E-42	Degraded insulating resistance is detected.		
E-43	Error occurred in booster circuit.		
E-44	Default setting(s) is faulty.		
E-62	Overvoltage occurred in booster circuit.		
E-64	Overcurrent occurred in inverter circuit.		
E-66	Overvoltage occurred in output (at high level).		
E-72	Overvoltage occurred in booster circuit (at high level).		
E-73	Overcurrent occurred in switching element.		

English

8 Glossary

AC				
Amount	Acronym for alternating-current.			
CO ₂ reductio	Amount of electric energy sold to utility company.			
	Quantity of CO2 reduced in the PV system, otherwise generated.			
	Acronym for direct-current.			
DC effluence	DC component included in output power detected on the PV inverter.			
Earth fault	Earth fault current detected on the PV inverter			
Energy				
Input voltage	cumulative electric energy generated by PV inverter.			
LCD	Voltage input into the PV inverter.			
	Acronym for Liquid Crystal Display. A variety of operational states of the			
Output curre	nt			
Electric current output from the PV inverter.				
Electric power output from the PV inverter.				
	Power purchased from utility company which is required to make up that			
PV	needed by nome appliances.			
Solar cell	Abbreviation of photovoltaic. New word for solar energy.			
	An electronic device to supply energy when irradiated. A group of cells			
Solar energy				
	involves heat and ultraviolet waves.			
Sold energy	Energy generated in PV system and sold to your utility company.			
String	A group of BV modulos connected in series			
Total cumulative energy				
	I otal energy generated in the PV system, accumulated from the time when the PV inverter was installed to the present.			

9 Generation Record

Please fill out the generated and sold energy in the table below. It should facilitate positive supervision of your PV system. Also, it is recommended that the owner keep a copy of the generation record so that it could be recovered even after a fault experienced on the PV inverter. Otherwise, neither the owner nor us can recover any lost info recorded on the PV inverter.

- Write down the value displayed as the previous month's energy (in the "MONTH" display mode) in the columns under the heading "Generated Energy". Since your PV inverter is not a measuring instrument, the values displayed should be recognized as of a rule of thumb.
- Into the columns under the heading "Sold Energy", write down the energy indicated on the tally or bill issued by your utility company. You may also take and write down readings from the meter on a set day every month.

YY MM DD	Generated Energy (kWh)	Sold Energy (kWh)	Purchased Energy (kWh)

YY MM DD	Generated Energy (kWh)	Sold Energy (kWh)	Purchased Energy (kWh)

English

MITSUBISHI ELECTRIC CORPORATION

###